

Audi A6 (Typ C8) 06/2018



Linkes Blech einschieben

Konsole positionieren



Insert left metal plate
Position console



Innerhalb des Handschuhfaches die beiliegende Schraube ins Blech
eindreihen



Mount enclosed screw into metal plate within glove box



Änderungen vorbehalten Subject to change


Audi A6 (Typ C8) 06/2018



Inserez la gauche tole
Positionnez la console



Introduza la chapa izquierda
Posicione la consola

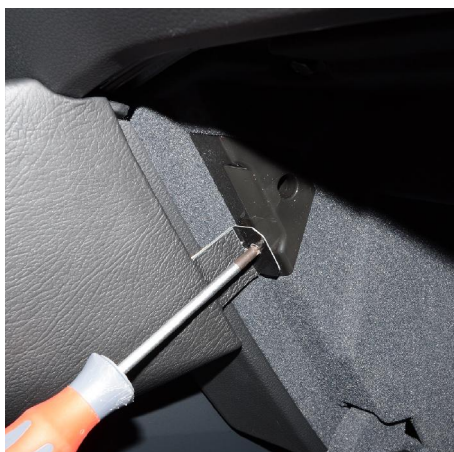

Vissez la vis jointe à l'intérieure de la boîte à gants dans la tôle



Dentro de la guantera atornille el tornillo adjunto en la chapa




Audi A6 (typ C8)
06/2018



Linker plaat er tussen schuiven
Console positioneren



Wsunac lewa blaszke
Konsole umiejscowic

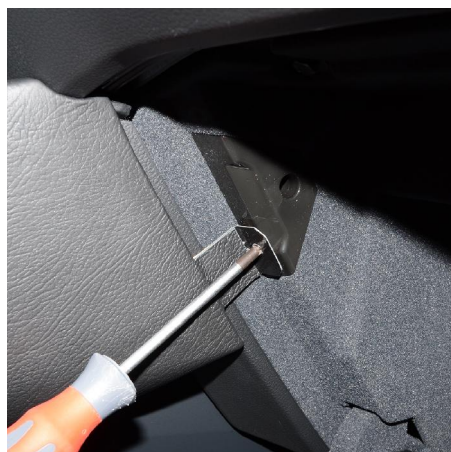

In het dashboardkastje de meegeleverde schroef in het metalen lip
draaien



W wewnatrz schowka przykrecic zalaczona srube



Nous nous réservons la possibilité de modification Salvo posibles modificaciones